



MICRO CLIENT

M@C84 / 104 / 121 / 150

User manual

Rel. 05.2006 Ver.01

0-0096-XXXX



The German version of this manual is not available.
Die deutsche Version ist nicht verfügbar.

Manual History

Date	Version	Changes
May.2006	01	First edition

Kontron Embedded Computers GmbH
Werner-von-Siemens-Str. 1
93426 Roding

Phone: +49 9461 950 -0
Fax: +49 9461 950 -100
e-mail: sales@kontron.com
Internet: <http://www.kontron.com>

COPYRIGHT

Copyright Kontron Embedded Computers
All rights are reserved

No part of this product, including the product and software may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the express written permission of Kontron Embedded Computers GmbH (hereinafter referred to as Kontron) except documentation kept by the purchaser for backup purposes.

TRADEMARKS

All trademarks mentioned in this manual are registered properly of the respective owners.

CE-CONFORMITY

The following requirements, standards, specifications constitute part of the declaration:


EN 55022 class A EN 55024 EN 60950
EN 61000-3-2 EN 61000-3-3 EN 61000-6-2

The validation of this declaration depends on the properly use of the product.

FCC Class A Radio Frequency

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to 1/47 CFR Part 15.109 Class A of FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.



The limits of FCC Part15 class A are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interfer-

ence to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by more of one or more of the following measures:

1. Reorient or relocate the receiving antenna
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
4. Consult the dealer or an experienced radio/television technician for help.

Notice1: The changes or modifications not expressly approved by the party responsible for compliance could void the user`s authority to operate the equipment.

Notice2: Shielded interface cables, if any, must be used in order to comply with emission limits.

CAUTION !

**RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE**

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

Table of contents

Copyright	3
Trademarks	3
CE-Conformity	3
1. Introduction	6
2. Overview	8
3. Hardware Installation	9
3.1 Connect external devices	10
4 Software installation	11
4.1 Application software and operating system	11
4.2 Hardware drivers	11
5. Technical Details	12
5.1 Mechanical	12
5.2 Electronical	12
5.3 Environment	12
5.4 CE Directives and Standards	12
5.5 Connector pinout	13
5.7 Block diagram	15
6. Maintenance	16
6.1 Customer service	16
6.2 Cleaning	16
6.3 Return and repair	16
6.4 Packaging	17
7. Troubleshooting	18
7.1 FAQ	18
8. Disposal	18
9. Appendix	18

1. INTRODUCTION

1.1. APPROPRIATE USE

The main purpose of the Micro Client is the use and operation with 24VDC-power-sources.

The surrounding area are dry rooms.

The Panel is intended for industrial applications in machine and plant control engineering.

The user is not entitled to change the system components or open the body without consultation to Kontron.

1.2 ITEM CHECKLIST

Your Micro Client comes securely packaged in solid shipping carton(s). Upon receiving your system, open the carton(s) and remove the contents carefully.

The shipping carton should contain the following items:

- Micro client M@C85 / 104 / 121 /150
- CPU Support CD (optional)
- 24V DC Power cord (optional)
- This user manual (optional)
- Software installation CD if implemented

Carefully inspect each component to ensure that nothing is missing and/or damaged. If any of these items is missing or damaged, please contact Kontron immediately. Preserve of of the packing material for future transportation.

1.3 IMPORTANT SAFETY INSTRUCTIONS

This section gives you detailed information about how to maintain a safe environment while using the Panel. You can maintain its condition and performance by following these guidelines. Please read it carefully to ensure maximum safety.

Be careful about the power supply input voltage. The Panel has specific power requirements.

Please prevent the Panel from humidity.

Never pour any liquid on the Panel, this may cause fire or electrical shock. Place the Panel on a reliable surface when installing. A drop or fall may cause damage.

Do not leave the Panel in an unconditional environment. Storage temperature above 60°C may damage the system.

The opening on the enclosure are for air convection, protect the system from overheating.

DO NOT COVER THE OPENINGS

If the Micro Client is not in use for a long time, disconnect it from mains to avoid possible damage by transient overvoltage.

If you had to open the housing of the Micro Client in service cases, all single parts of the plant must first be switched off, after which the Micro Client can be disconnected from the plant. Secure each part against accidentally switched on during service.

Following service activities on the system could cause failures.

- Metal objects such as screws or tools fall on or in.
- Cables are removed or inserted during operation.

All cautions and warnings on the micro client should be noted.

The system has to shut down and checked immediately by service staff, if one of the following situation appears:

- The power cord or plug is damaged.
- Liquid has penetrated the system.
- The system is exposed to moisture.
- Obvious sign of breakage are visible.
- System did not work properly or you can not get it work according to the application requirements.

2. OVERVIEW

Kontron's MicroClients (Thin Clients) used as web-based display and operator panels with all the application programs running on a central web server are very low-maintenance and also highly flexible. The advantages of this thin client architecture include centralized administration and software maintenance, maximum data security through centralized data storage and backup, and high reliability and availability (high MTBF values) through the elimination of rotating mass storage devices and fans, which reduces the total cost of ownership to the minimum.

Designed to meet the performance requirements of visualization and communications over ethernet, the new MicroClients M@C84, M@C104 and M@C121 have high-performance ETX-based x86 CPU modules that can be scaled inexpensively to meet changing performance needs. The innovative fanless cooling concept allows for a compact, space-saving system .

Shock and vibration resistance, thermal stability and compliance with the strictest EMC standards are standard features for all MicroClients.

Features:

- scalable display sizes: 8.4" / 10.4" / 12.1"
- resistive analog touch screen
- X86 processor
- small depth of <50 mm
- Compact Flash
- CAN bus on board
- up to 256 MB SDRAM
- Optional: 1x RS 232, 1x LAN, 2x USB
- IP 65 front (NEMA 250 type 12 and 13)
- power supply: 24 VDC and fanless cooling concept
- meets toughest industrial requirements
- Windows CE.net, Windows XP embedded, Embedded Linux
- All connectors build for industrial standards
- Shock and vibration tested
- Embedded architecture long-life electronic components

3. HARDWARE INSTALLATION

Attention!

**The weight of the Panel is about 7kg
Carry it on with both hands!**

The Micro Client of this type is developed to work in a control cabinet. Thereby it must be pointed that all the environmental conditions must be considered.

When installing the Panel take care that there is enough area for ventilations on rear side. For details go to item housing dimensions.

If your Panel was delivered without software install a keyboard and mouse.

If operating system and software is installed, the touch is working and calibrated.

Look up for further settings e.g. BIOS on the CPU board manuals.

3.1 CONNECT EXTERNAL DEVICES

To get detailed information about pinout of each connector please look to chapter “technical data

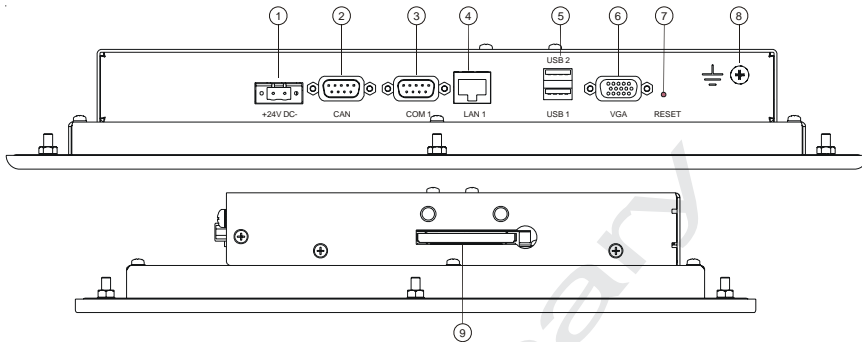


Fig. 3-1

1 Main power IN

Use this connector to connect the power supply of 24VDC. Please note the Power requirements (See chapter technical details).

2 Fieldbus interface CAN

External connector of internal fieldbus controller. Interface to connect CAN devices.

3 Serial Interface COM1

One serial interfaces enables you to connect a external device with 9 pin DSUB connector such as mouse or modem.

4 LAN 1 interface

This connector provides a external interfaces 10/100 BaseT on RJ45 to connect your Panel to other devices in a network.

5 LAN 2 interface

This connector provides a external interfaces 10/100 BaseT on RJ45 to connect your Panel to other devices in a network.

6 USB port 1/2

This connector provides two external USB 2.0 interfaces

7 CRT Monitor interface

Connector and interface to VGA/CRT monitor .

8 Reset

Reset Switch reset the hole unit.

9 Compact flash slot

This Slot is used to save the compact flash for storing operating system

4 SOFTWARE INSTALLATION

4.1 APPLICATION SOFTWARE AND OPERATING SYSTEM

The panel is designed to work with different operating systems. To install operating system or application software follow the installation instructions of the software.

4.2 HARDWARE DRIVERS

On preinstalled systems no drivers had to be installed by a technician or user. If no operating system was installed, you had to install drivers for the implemented hardware to get full function of the panel. All the drivers are stored on the provided Support CD. Drivers also available at the online support at

<http://www.kontron.com>.

If you need additional help please contact Kontron customer service.

5. TECHNICAL DETAILS

5.1 MECHANICAL

Features	Micro Client				
Model	M@C84	M@C104	M@C121	M@C150	
Display size	8.4"	10.4"	12.1"	15"	
Dimension panelmount H x W x D	188 x 257 x 47mm	252 x 325 x 47mm	300 x 380 x 49mm	362 x 452 x 57mm	
Front Bezel	ALU or stainless steel optional				
Weight					
Protection class	IP65 Front (NEMA 250 type 12 and 13)				

5.2 ELECTRICAL

Features	Micro Client				
Model	M@C84	M@C104	M@C121	M@C150	
Max. resolution	800 x 600	800 x 600	800 x 600	800 x 600	
Brightness	300cd /m ²	300cd /m ²	300cd /m ²	300cd /m ²	
Front Bezel	ALU or stainless steel optional				
Touch screen	Resistive analog				
Processor	Up to Celeron M 600 MHz				
Main memory	Up to 1024 Mbyte				
External interfaces	1x CAN BUS interface; 1x Serial RS232 interface; 1x LAN 10/100; 2x USB; 1x VGA				
Field Buses	CAN				
Internal Drives	CompactFlash up to 2 GByte				
Verified OS	Windows XP, Windows XP embedded, Linux				
Power Supply	24 VDC +/- 20% with protection against reverse polarity.				
Power consum.					
I max					
Battery	External Lithium 3,5V 750mAh				
MTBF	> 40000h *				

5.3 ENVIRONMENT

Features	V Panel all models
Temperature	Operating: 0° to +50°C Storage: -25° to +60°C
Humidity	Operation: 5 to 95% non condensing Storage: 5 to 95% non condensing
Cooling	Fan less cooling concept
Shock acc. DIN EN 60068-2-27	Operating: 15G, 11ms duration Storage: 30G, 11ms duration (half-sinus)
Vibration acc. DIN EN 60068-2-27	Operating: 10-500 Hz: 1G / 3 axis Storage: 10-500 Hz: 2G / 3 axis
Altitude	Operating: 10000 ft (3,048m) Storage: 15000 ft (4,622m)

5.4 CE DIRECTIVES AND STANDARDS

Features	V Panel all models
EMC	US: FCC47 CFR PART 15; Class A level CE: EN61000-6-2; EN55022/A (CISPR22)
Approvals	CE, FCC, cULus
RoHS Compliant	Yes


5.5 CONNECTOR PINOUT

1 PS/2 Keyboard/Mouse Connector




PIN	Signal Name	PIN	Signal Name
1	+24V	2	GND

2 Fieldbus CAN interface




PIN	Signal Name
1	NC
2	CANL
3	ISOLATED GND
4	NC
5	NC
6	NC
7	CANH
8	NC
9	NC

3 RS232 Connector COM1




PIN	Signal Name
1	DCD (Data Carrier Detect)
2	RXD (Receive Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	GND
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	RI (Ring Indicator)

4 Network LAN 1 interface




PIN	Signal Name	PIN	Signal Name
1	TX+	2	TX-
3	RX+	4	NC
5	NC	6	RX-
7	NC	8	NC

5 USB interface



PIN	Signal Name	PIN	Signal Name
A1	VCC	B1	VCC
A2	Data-	B2	Data-
A3	Data+	B3	Data+
A4	Gnd	B4	Gnd

6 VGA interface



PIN	Signal Name	PIN	Signal Name
1	RED	2	Green
3	Blue	4	NC
5	CRTGND	6	CRTGND
7	CRTGND	8	CRTGND
9	VCC	10	CRTGND
11	NC	12	DDCDAT
13	HSYNC	14	VSYNC
15	DDCCLK		

7 Reset switch

8 Grounding point

Preliminary

5.7 BLOCK DIAGRAM

The diagram displayed below shows the main internal function blocks of the Micro ClientPanel.

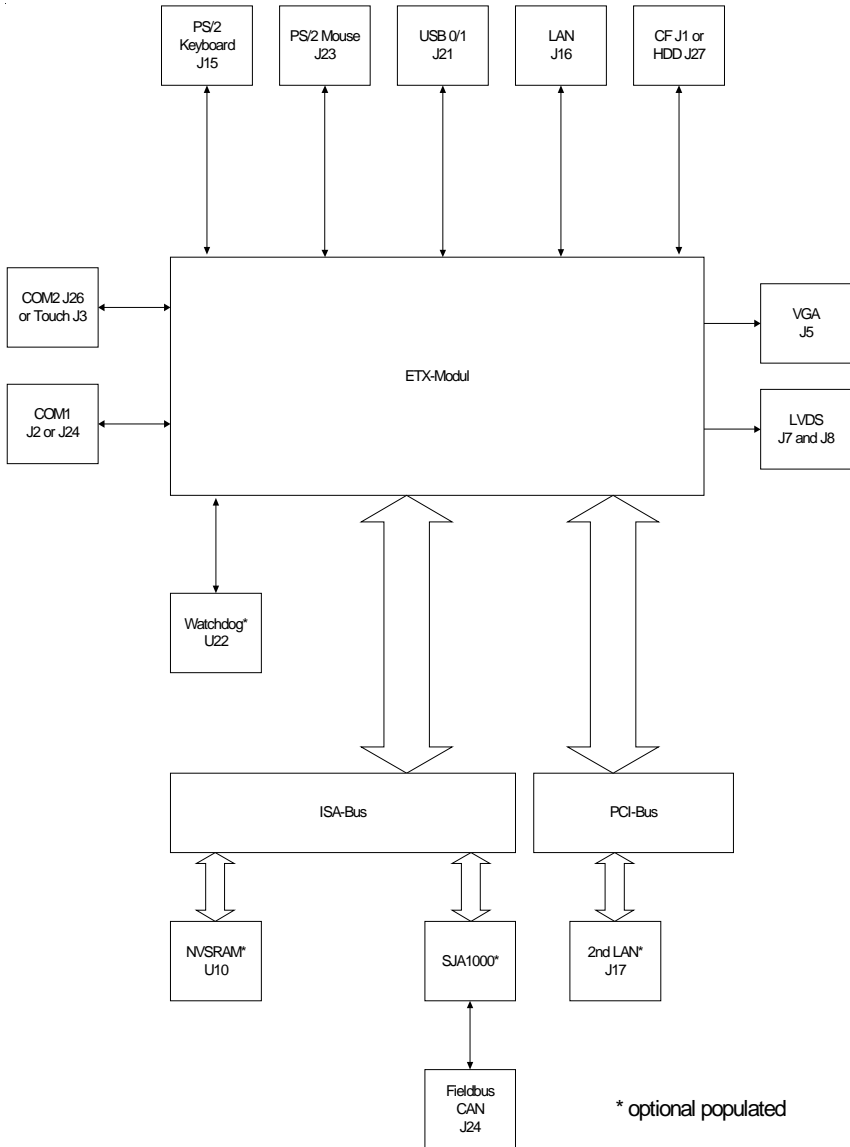


fig. 5-1

6. MAINTENANCE

The Micro Client is designed and produced according to DIN EN ISO 9000:2000. One of the main development intentions was to minimize service requirements. As a result, with exception changing CMOS-Ram battery and cleaning, no great service is to do.

In case off any error kindly note the remarks below.

To analyze the error please check first all connections and configuration of the software. Don't try to repair the hardware inside.

No warranty if improper operated

6.1 CUSTOMER SERVICE

To get more technical information and help concerning errors on the Panel please contact Kontron customer service.

Tel: +49 (0)9461 950 104
Fax: +49 (0)9461 950 200
E-Mail: support@kontron.com
Internet: <http://www.kontron.com>

6.2 CLEANING

To clean the surface of the Panel use a soft lint-free cloth. It should be slightly moist with a mild detergent solution or any computer cleaning kit.

Never use alcohol, petroleum-based solvents or aggressive agents to clean the Panel. Also never pour any liquids directly in the Panel PC Box.

To clean the liquid-crystal display (LCD) screen use soft clean lintfree cloth, moist with a mild glass cleaner, and gently wipe the surface. Never apply liquids directly on the screen surface. Do not use paper towels to clean the display screen. Paper can scratch the display touch film.

6.3 RETURN AND REPAIR

Kontron Embedded Computers GmbH has started a service management system according DIN EN ISO 9001:2000 to reduce the terms of repair. This provides a fast, high quality and effective repair.

6.3.1 Return Material Authorization Numbers (RMA)

Before send back the defective device please follow the hints below then request a RMA number from Kontron customer service.

- Return only Kontron product specified on the RMA request.
- Request a separate new RMA number for each Kontron product.
- If we receive a shipment containing not authorized products, we may send it back.
- Please check before requesting an RMA number if there is a real defect on the system. If not we could charge the costs for handling.

To request a RMA number fill out the form „Fault report“ and send him to Kontron customer support. You can get the form as a download on <http://www.kontron.com>. For additional questions please contact the customer service by fax or Email.

Fill out all the menu items on the form and send it to Kontron by FAX or online. Describe the error as detailed as possible. A detailed report is a base for a fast and effective analyze of errors and repair.

After getting back the “Fault report” send the defective device, including the fault report and your delivery note, to the following address:

**Kontron Embedded Computers GmbH
Warenannahme Service
Werner-von-Siemens-Str. 1
D-93426 Roding**

6.4 PACKAGING

To return a system use the original Kontron or equivalent packaging. Parts or components of the system must be returned in anti-static-bags.

Always enclose a copy of the original delivery note and the fault report.

Kontron is not responsible for damage during shipment. We recommend that you insure the shipment.

7. TROUBLESHOOTING

7.1 FAQ

Please look to the online support at www.kontron.com

8. DISPOSAL

In order to dispose your Panel, it must be removed from the plant and fully dismantled. Electronic part such as disc drives and circuit boards must be disposed of in accordance with national electronic scrap regulations.

For details ask your local waste disposal department.

9. APPENDIX

ILLUSTRATION CONTENTS

Fig. 3-1	Connect external devices
Fig. 3-2	Connect internal devices
Fig. 5-1	Block diagram